



15 SLOT MAILBOX ASSEMBLY INSTRUCTIONS


PARTS LIST

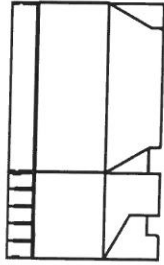


BASE (1)

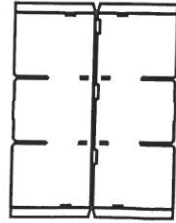


SHELVES (4)

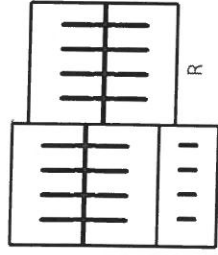


DIVIDER SET (1)

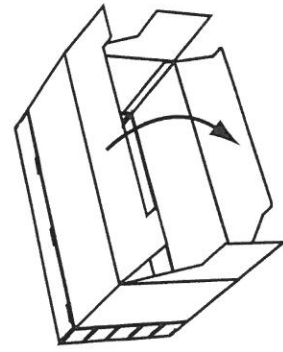


1. Square up the BASE with the BACK of it facing you. Fold the TOP FLAP over.

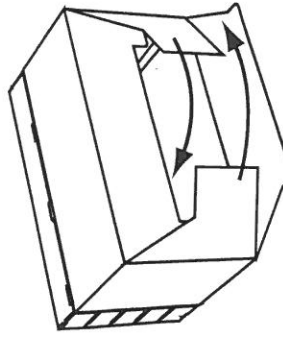


2. Fold the SIDE FLAPS over.

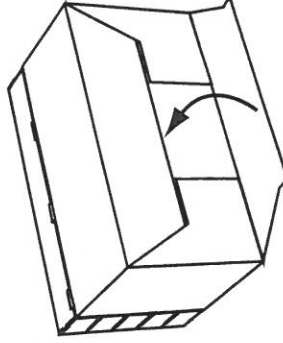


3. Fold the BOTTOM FLAP over and tuck it under the TOP FLAP to lock it together.

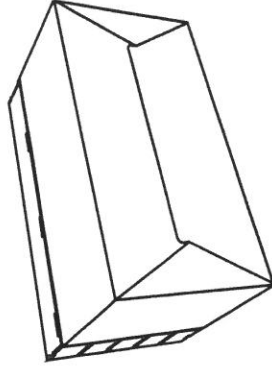


ASSEMBLED BACK OF THE BASE

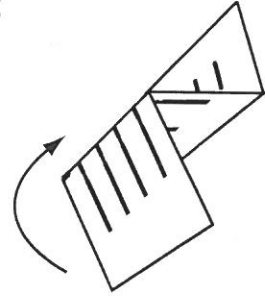


4. Locate Left DIVIDER set. Square up the LEFT DIVIDER by folding it inward.

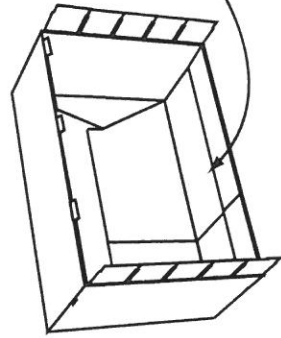


5. Place the LEFT DIVIDER into the middle of the ASSEMBLED BASE.

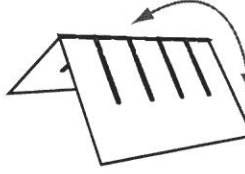


6. Fold inward the RIGHT DIVIDER.

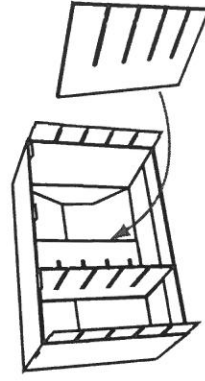


7. Place the RIGHT DIVIDER into the middle of the ASSEMBLED BASE.

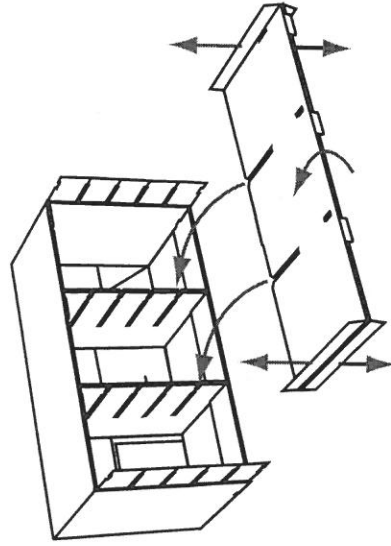

8. Fold inward the SHELF then back-fold the small side flaps. Insert a SHELF into the bottom slots of the DIVIDER.

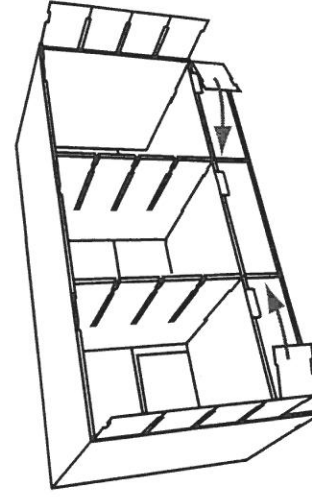

9. Fold the bottom SIDEWALLS of the BASE inward. Insert the other SHELVES the same way, folding inward the SIDEWALLS as before.

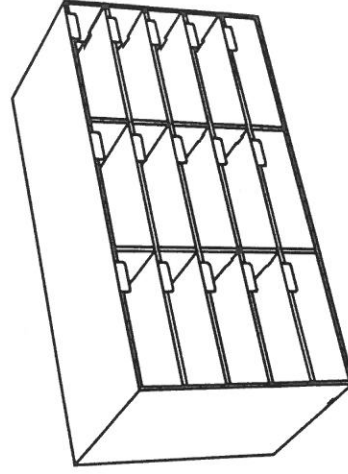

ASSEMBLED
15 SLOT MAILBOX